

For the ET-8550 install the Film Direct 8550 ink or Graphics One Screenmate ink only. Do not mix any other ink in the tanks. Failure to do so will damage the head and void the warranty. Fill all the slots with black ink.



Follow the Epson instructions that come with the printer on how to load the ink, film and calibrate the head if necessary. Fill all the slots with black ink.


Connect the printer to the computer via a USB or ethernet cable only. (Not included). We do not recommend connecting the printer via WIFI.

Go to Epson.com and search for the latest drivers for your operating system. Even if the printer auto installs on your computer it's imperative to download and install the printer from the most current set of drivers.

With the printer installed on the system run a test print to make sure the printer and computer are communicating.

Once confirmed that the printer is functioning properly download and install the PrintFab RIP software. We include instructions via email.

With Printfab installed, open PrintFab and click the +Add button. Follow the prompts and add the ET-8550 series printer.

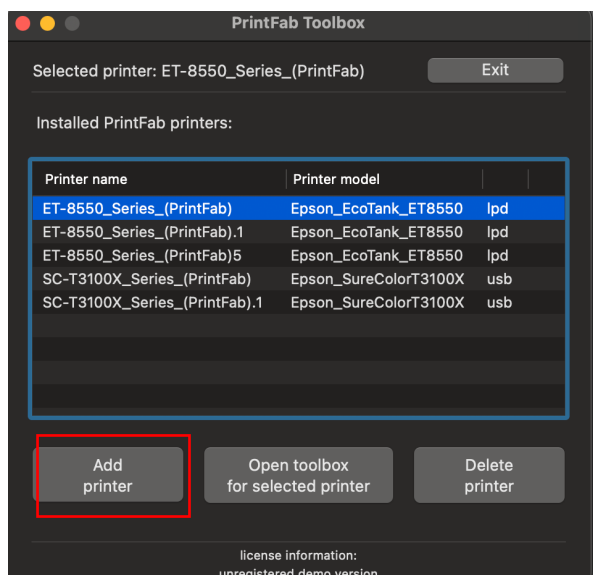



Follow the prompts and install the et-8550 as a usb or ethernet connected printer only.

With the printer installed close the PrintFab Toolbox.



To setup the PrintFab Presets open any document in Apple “Preview” (not Adobe).





Go to File>Print
Scroll to Printer Options > Paper Feed> Choose Rear Feed.

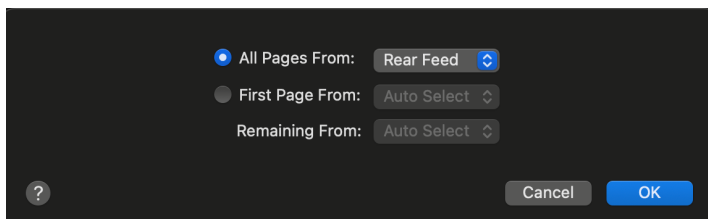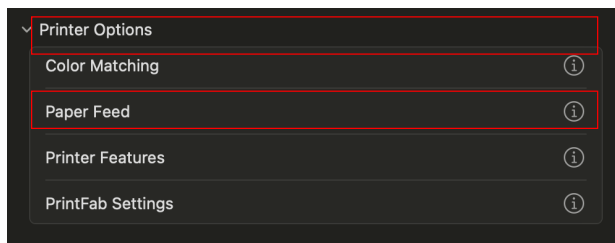



Go to Printer Features>Feature Sets> Printer Settings. You can leave default.

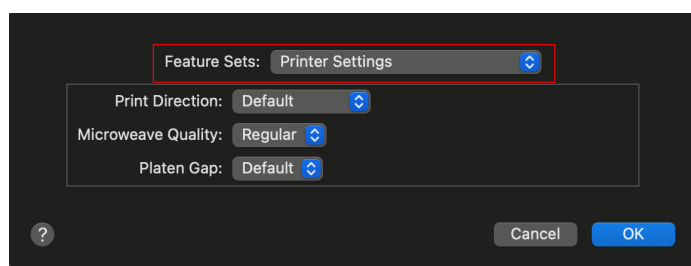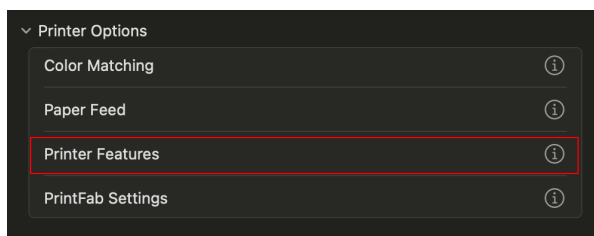



Go to Printer Features>Feature Sets> Special Settings Screen Printing Change it to the following. Please note the screen ink saturation is a variable and can be changed if the print is too light or too dark. The Screen LPI, Angle and Shape are all user defined below is our recommended settings.

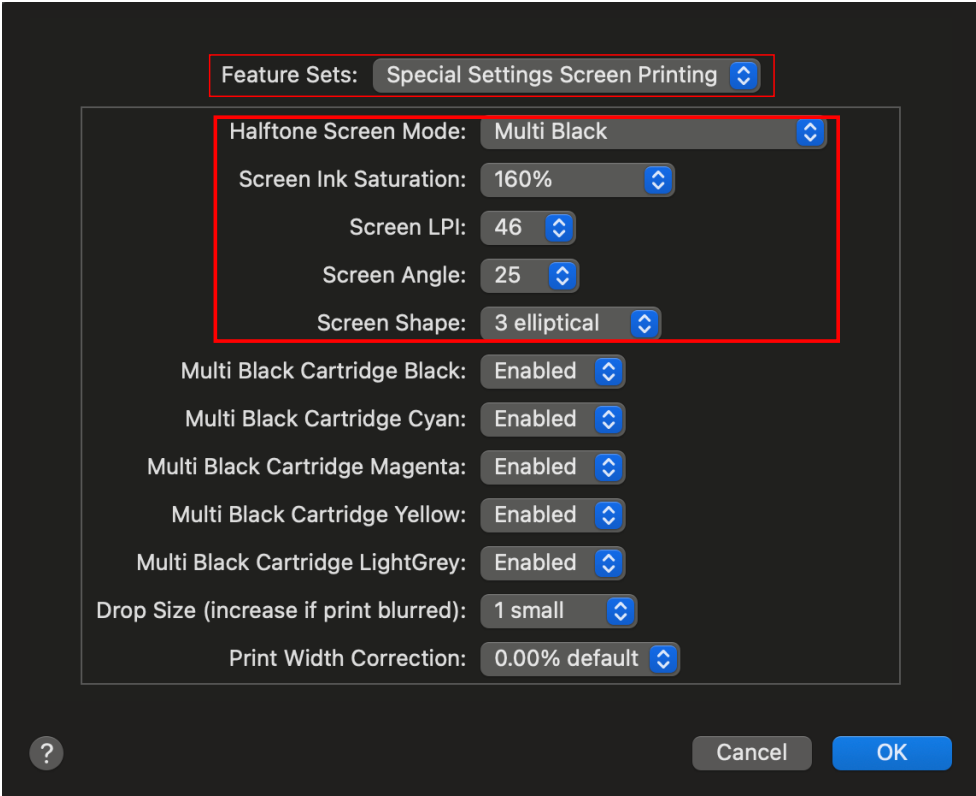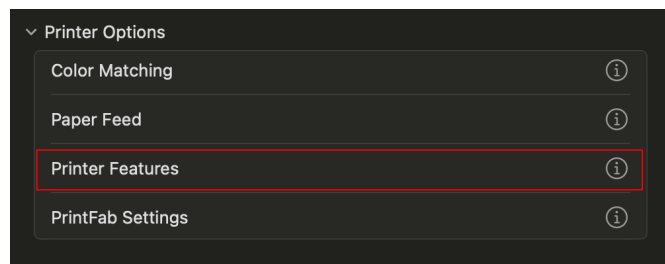


Go to PrintFab settings:
Choose Quality 1440
Silk Screen Film
Thats all you need to change

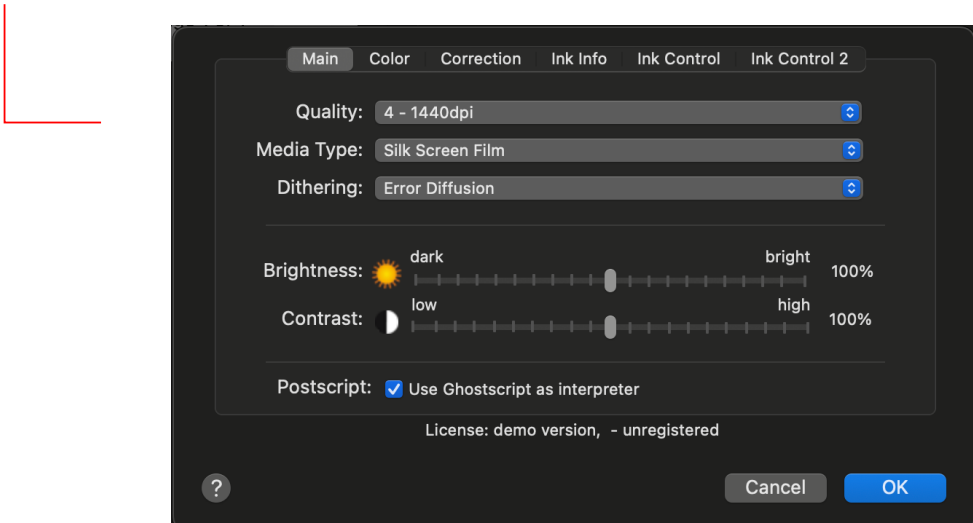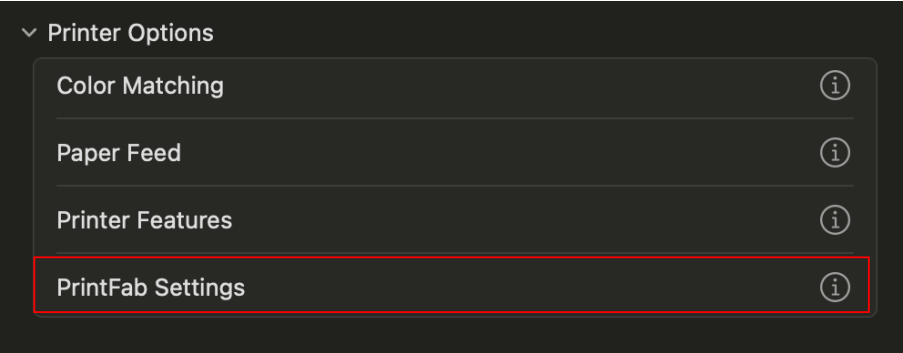


Save the preset: Go to the top of the current page, locate Presets>Save Current Settings as Preset
Name the preset. Click OK. This should save the settings.

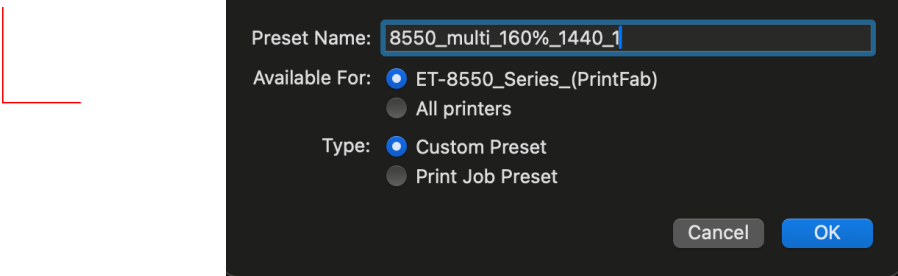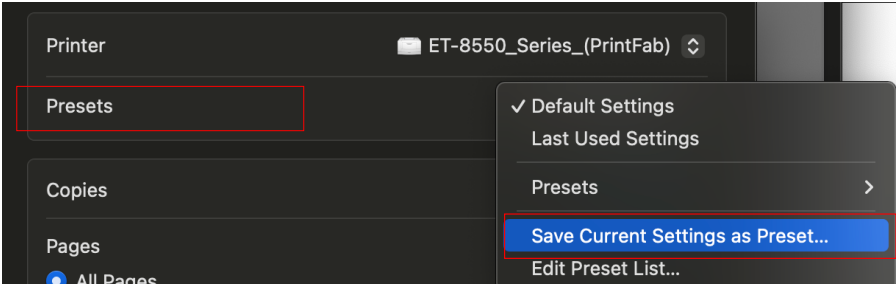


To Print a file open your document in Illustrator. Make sure Printer is set to your _printer(Printfab). For Media size Choose your a size that matches your document size. 13x19 is a3+. Click on Setup.

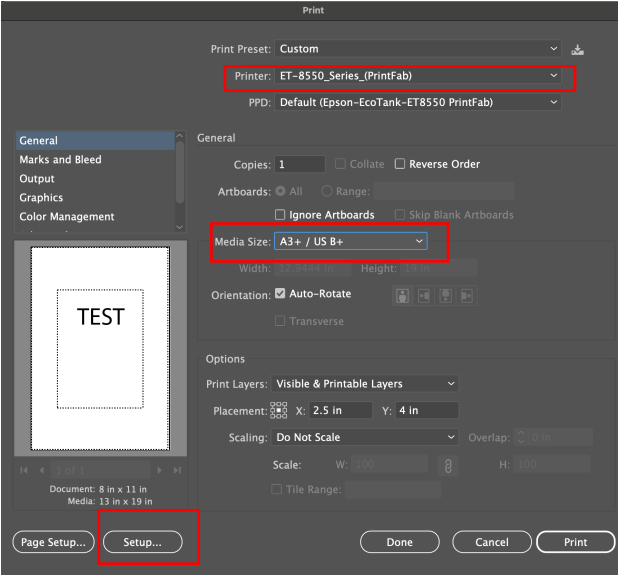

Choose the preset you previously created in Preview. Click Print. This will take you back to the Illustrator print Preview page.

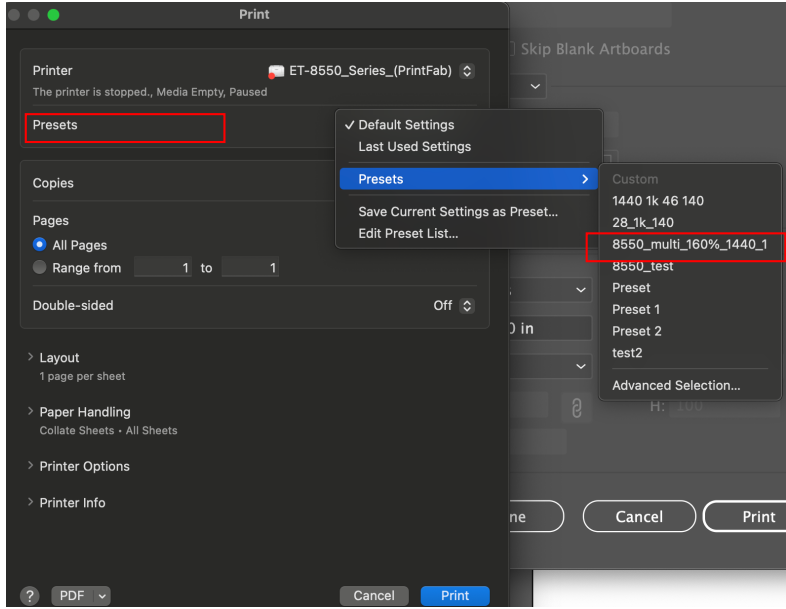

Click on Output. For Mode Choose Separations, choose any spot colors or process black.
Click Print, this will send the job to the printer.

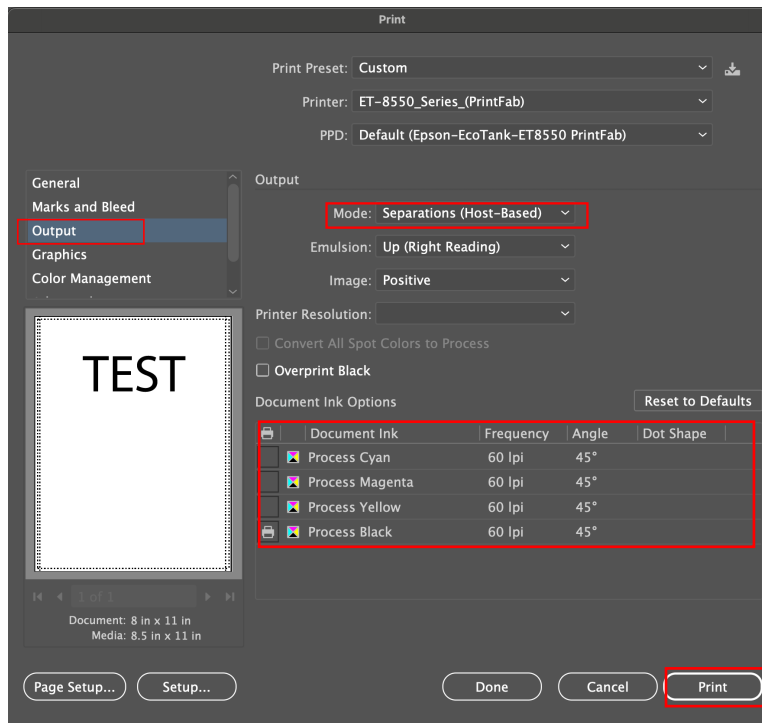

If you have any questions reach out to support at 1-800-683-5752
or our text hot line at 805-218-0957. Please have your order number available